# **TR 9650**


# Mobile Bath Lift System



## Quick guide for the Stretcher Lift - Combi Lift





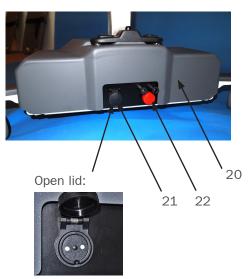

Position	Description
1	Support column
2	Chassis Base
3	Transfer handle
4	Chassis leg
5	Positive brake castors, 100mm Twin
6	Straight steering castors, 100mm Twin
7	Foot control for raising
8	Foot control for lowering
9	Stainless Steel column
10	Hygiene Seat
11	Stretcher side parts
12	Hygiene slot

13	"TR "Protection cover
14	Stretcher attachment and position setting bars
15	Safety belts
16	Transport grip
17	Stabilizing bar
18	Arm/Back support
19	Drive belt
20	Low battery audible tone
21	Battery charger input
22	Emergency Stop

Working Load Limit: 150 kg (330 lbs)

Phone: +49 2175-16 94 22-0 Fax: +49 2175-16 94 22-19



### **TR 9650**

#### Mobile Bath Lift System



#### Quick guide for the Stretcher - Combilift

- Only qualified staff, who understand all operating and safety procedures may operate the equipment.
- Safety belts must be securely fastened around patient at all times and patients feet should rest firmly on the stretcher pad.
- Never leave the patient unattended.
- Castor brakes must be securely locked on the Lifter before transferring a patient on to the chair/stretcher.
- The patient must be positioned comfortably on the chair/stretcher, with folded rotating arm/stabilizing bar.
- Make sure that all parts that come in contact with the patient are intact and without sharp edges.
- Ensure that the Lift can be moved, raised or lowered safely to avoid any pinch injuries to patient.
- Operate the Lift carefully when transporting patients through narrow corridors or over irregular uneven surfaces.
- The TR battery charger is the only one approved for charging.
- Do not use battery charger in wet or damp areas potential shock hazard.
- It is recommended that the batteries are charged daily or whenever Lifter is not in use. Batteries can not be overcharged.
- Check that castor brakes and straight steering are free from damage.
- Be sure that all details are in place and free from damage and all screws are in place.
- Pads must be kept well maintained in place.
- Lift and chair/stretcher must be inspected visually for sign of wear. Lift should not be used if defects are noted. Prompt service is required.

Warning: Never use the Lifter in any way that varies from the safety precautions and operating procedures detailed in the operating manual. The equipment must not be operated by anyone until the user has fully read and understands the instructions in the operating manual

#### Safety autostop mechanism:

If the chair/stretcher hits an obstacle when lowering, the Lift will safely stop automatically. To release it, just press the "up" right arrow foot control. Same procedure if the lifting belt is slacking. If lifting belt fails, the chair/stretcher will stop/lock automatically on the column. Call for technical assistance.

For further information see Operating manual



Fax: +46 140-38 50 61

